

ORDER NO: B R-C302-PK K-N

B-Type (General) Order Sheet

Your Order No. : _____
Q'ty : _____
Delivery Date : _____

Issued on : _____
Company Name : _____
PIC : _____

< Product Type >

①Basic Type (1~2digits)	②-1~②-3 Operation Type (1~5digits)	③Contact Diagram Code (2~6digits)	④Contact Type (0digits~)	⑤Terminal Cover (0~2digits)
B	R	C 3 0 2		

⑥Handle (2~3digits)	⑦NP Stand	⑧ NP	⑨Letters for NP (1~3digits)	⑩ Indica tor	⑪KEY No. (Fill when Key Handle Operation Only)
P K K		N			B -

①Basic Type (See Page A-66)

Code	NP Attach Method
B	Screwing Type
AB	Screwing Type(Large-Size)
JB	One-Touch Type
YB	One-Touch Type

⑤Terminal Cover (See Page A-72)

Code	Spec
Nothing Filled	No Terminal Cover.
C	Side Cover (up to 6 units)
LC	Upper Cover (up to 12 units)

* Side Cover and Upper Cover cannot be used together.

②Operation Type

②-1 Only for Rotating Operation (See Page A-67)

Code	Operation Type
N	Manual Operation
R	Spring Return to Center
RX	Spring Return to Center (with Click)
R2	Spring Return to "2"
R8	Spring Return to "8"
NR2	Combined Manual Return/Spring return from "2" to center.
NR8	Combined Manual Return/Spring return from "8" to center.

④Handle Type (See Page A-72~73)

Code			Shape	Code			Shape
Black	Red	Green		Black	Red	Green	
NN			No Handle	ARK	ARR	ARM	Large Chrysanthemum
RK	RR	RM	Chrysanthemum	APK	APR	APM	Large Pistol
PK	PR	PM	Pistol	AVK	AVR	AVM	Large Oval
VK	VR	VM	Oval	ASK	ASR	ASM	Large Stick
SK	SR	SM	Stick				
YK			Arrow				
FK	FR	FM	Boat				
GK			Ball				

②-2 For Rotating Operation + Pull/Push Operation (See Page A-67~68)

Rotating	Pull/Push	Pull/Push Operation		Rotating Operation	
		Recovery Type	Push Position	Push Position	Pull Position
N	SF	Spring Return to Push Position	Unrotatable	Rotatable	Rotatable
R	SL	to Push Position	Rotatable	Unrotatable	Unrotatable
	PF	Manual Operation	Unrotatable	Rotatable	Rotatable
	PL		Rotatable	Unrotatable	Unrotatable
	TF	Spring Return to Pull Position	Unrotatable	Rotatable	Rotatable
	TL		Rotatable	Unrotatable	Unrotatable

* Fill in Position Code for Pull/Push Operation.
Fill "0" if Pull/Push Operation is needed at all the positions.

⑦NP Stand (Escutcheon) (See Page A-74)

* In case of B-Type, AB-Type, YB-Type

Code	Spec.
N	No NP Stand
K	Black(Close to N1.5)
A	Gray Blue(Close to 7.5BG 4/1.5) *

* Gray Blue Color is not available in case that Basic type is JB or YB-Type.

* In case of JB-Type

Code	SPEC
K	Black(Close to N1.5)
K(S10)	Black(for 1.0mm Acrylic NP)

⑧Name Plate Type (See Page A-74)

Code	Spec.
N	Aluminum Name Plate (Standard)
S	Stainless Name Plate
A	Acrylic Name Plate

* Acrylic Name Plate is not available in case that the Basic Type is YB-Type.

②-3 For Key-Handle Operation (See Page A-69~70)

Code	Operation Type
NK	Manual Operation
RK1	Spring Return to Center
R2K8	Spring Return to Position "2"
R8K2	Spring Return to Position "8"
NR2K	Combined Manual Return/Spring return from "2" to center.
NR8K	Combined Manual Return/Spring return from "8" to center.

* Fill in Position Code for Key Handle Insertion or Pull out.
Fill "0" if Key Handle Insertion or Pull out is needed at all the positions.

③Contact Diagram Code (See Page A79~98)

Choose a proper Contact Diagram from Major Contact Diagram List.

Any Contact Diagram not listed in the list must be newly ordered.
Specify your desired Contact Diagram on the sheet for submission.
In case of newly ordered item, please indicate Contact Diagram Code by Unit Q'ty x X1

* For example · In case of 2 units...·2X
 · In case of 10 units...·10X

④Contact Type (See Page A-71)

Code	Contact spec
Nothing Filled	All units are Silver Contacts (Standard).
0	All units are Silver-Twin contacts.
V	<input type="checkbox"/> Silver-Twin contacts only for the units filled in <input type="checkbox"/> .
G	<input type="checkbox"/> All units are Gold-Twin contacts.
	<input type="checkbox"/> Gold-Twin contacts only for the units filled in <input type="checkbox"/> .

⑨Letters for NP (See Page A-74~77)

Code	Spec.
Nothing Filled	No Name Plate
0	Blank NP
X	To inscribe customized letters
<input type="checkbox"/>	Already Printed Name Plate (Choose on Page A-77)

⑩Indicator (See Page A-78)

Indicator can be added only in case of Spring Return(Operate Angle : 45°).

Indicator is not available if Basic Type is AB- and YB-Types or of Acrylic Name Plate.


Code	Spec.
Nothing Filled	No Indicator
(W)	With Indicator

* Special Name Plate with Indicator is provided in case that Indicator is used.

⑪Key No. (See Page A-69~70)

KEY No.	Convex Key Shape	KEY No.	Concave Key Shape
B9		B8	
B3	Differently positioned Pin	B2	Differently positioned Pin
B5	Item	B4	Item
B7		B6	
B1-R	Clockwise	B10-R	Clockwise
B1-L	Unclockwise	B10-L	Unclockwise
B2X	For 3-positions and more	B3X	For 3-positions and more
B8X	For 2-positions	B9X	For 2-positions

CONTACT DIAGRAM:

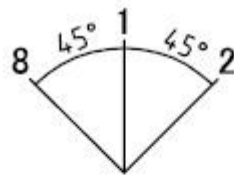

N

2 Units

C302					
	(8)	(1)	(2)		
o 11				o 12	o
o 13	•			o 14	o
o 21			•	o 22	o
o 23	•			o 24	o